

*Rohnson*<sup>®</sup>

Instructions Manual

## **Crepe Maker R-2202**



**For your safety and continued enjoyment of this product  
always read the instruction book carefully before using**

## IMPORTANT SAFEGUARDS

- **READ ALL INSTRUCTIONS**
- Use only on AC 220-240 Volt, 50/60 Hz. Use only for household.
- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.

- Keep the appliance and its cord out of reach of children less than 8 years.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Only use the appropriate connector for this device.
- The appliance is to be connected to a socket-outlet having an earthed contact (for class I appliances)

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,  
ONLY AUTHORIZED PERSONNEL SHOULD DO REPAIRS.**

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## DESCRIPTION OF PARTS



1. Non-stick Plate
2. Ready Light (Green)
3. Power Light (Red)
4. Temperature control knob
5. Anti-slip feet
6. Decorative panel

## BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging. Remove the stickers, protective foil or plastic from the device and clean the appliance. (See cleaning and maintenance.)
- Place the appliance on a flat stable surface and hold at least 30 cm. free space around it. Make sure the unit is placed in a upright position.
- Put the power cable into the socket and turn on the appliance. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device.
- Clean the Cooking Plate by wiping with a sponge or cloth dampened in warm water.
- **DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ONTO THE COOKING SURFACE.**
- Dry with a cloth or paper towel.
- Allow the hotplate to become hot.

**NOTE:** When your Crepe Maker is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance. However, it may affect the flavor of the first set of crepe prepared in your crepe maker, and it is recommended that you discard these.

## HOW TO USE

- Inset the plug into the power outlet, you will notice that the red power light will go on. Turn the temperature knob to MAX and the green ready light goes on. Indicating the appliance is heating up.

- Allow your appliance to pre-heat until the green ready light goes off. This indicates that the cooking plate has reached the correct temperature for cooking.
- For best results, lightly spray the cooking plate with a cooking oil spray before using. This will assist in the removal of the crepes after cooking.
- Once the green ready light is off, pour crepe batter onto the baking plate spreading it with a circular movement using the batter spreader.
- The green ready light will continue to go on and off during the cooking process indicating that the appliance is heating up appropriately.
- Allow the crepe to cook until the surface is no longer liquid and the crepe can be moved slightly.
- Using a spatula, lift and flip the crepe completely.
- Continue to cook on this side until the underside is browned slightly and easily lifted.
- Remove the crepe to a wire rack and allow it to cool slightly before stacking on a plate. Adjust the temperature as needed after the first crepe is done.
- Always unplug the appliance and allow it to cool before removing cooking plate.

## **CLEANING AND CARE**

- Always unplug the crepe maker and allow it to cool before cleaning. There is no need to disassemble the crepe maker for cleaning.

- Never pour cold water on a hot plate, this could damage the device and can cause splashing hot water.
- Clean the hotplate with hot water, washing-up liquid and a damp cloth or soft brush. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Clean the appliance's housing with a soft, damp cloth.
- Do not place in the dishwasher.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.
- Do not use metal utensils to remove your crepe, they can damage the non-stick surface.
- Make sure the appliance is thoroughly dry before storing it.

---

---

## STORAGE

- Always unplug the Crepe Maker before storage.
- Always make sure the Crepe Maker is cool and dry before string.

**Caution:**  **the surfaces are liable to get hot during use**

**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

